



# DISTANCE VERSUS IMPACT FORCE

## Short and Long Nozzle Configurations

**Gamajet V - Distance vs. Impact Force @ 300 PSI - 2 Short Nozzles**

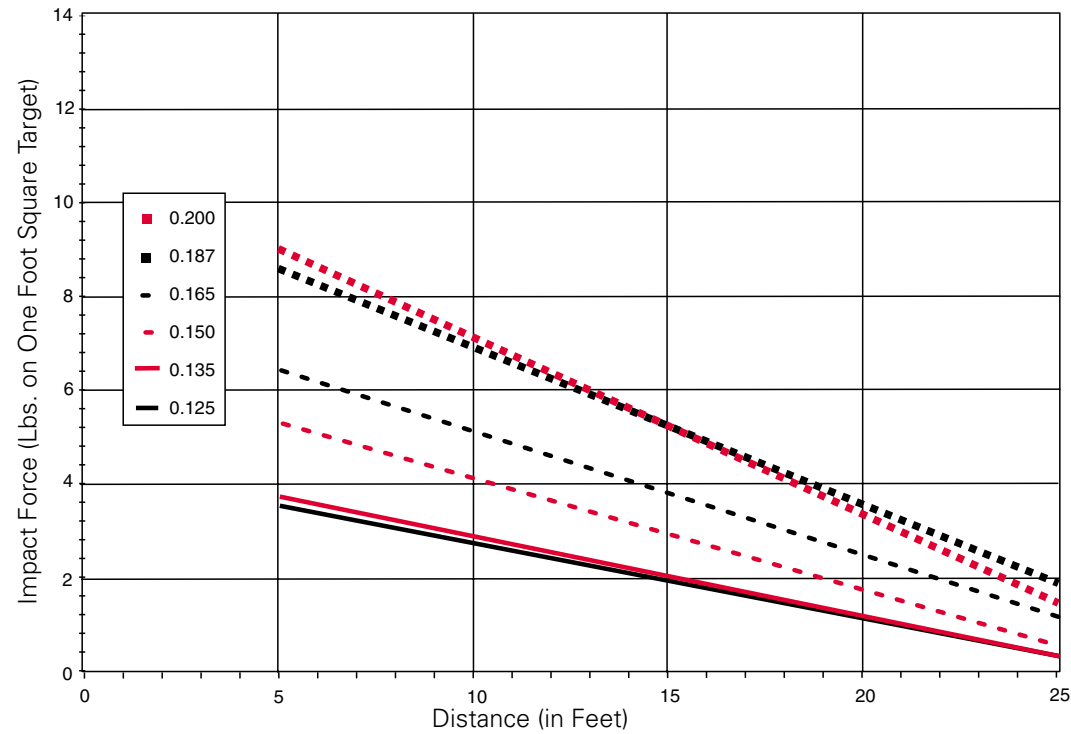

**Gamajet V - Distance vs. Impact Force @ 300 PSI - 2 Long Nozzles**

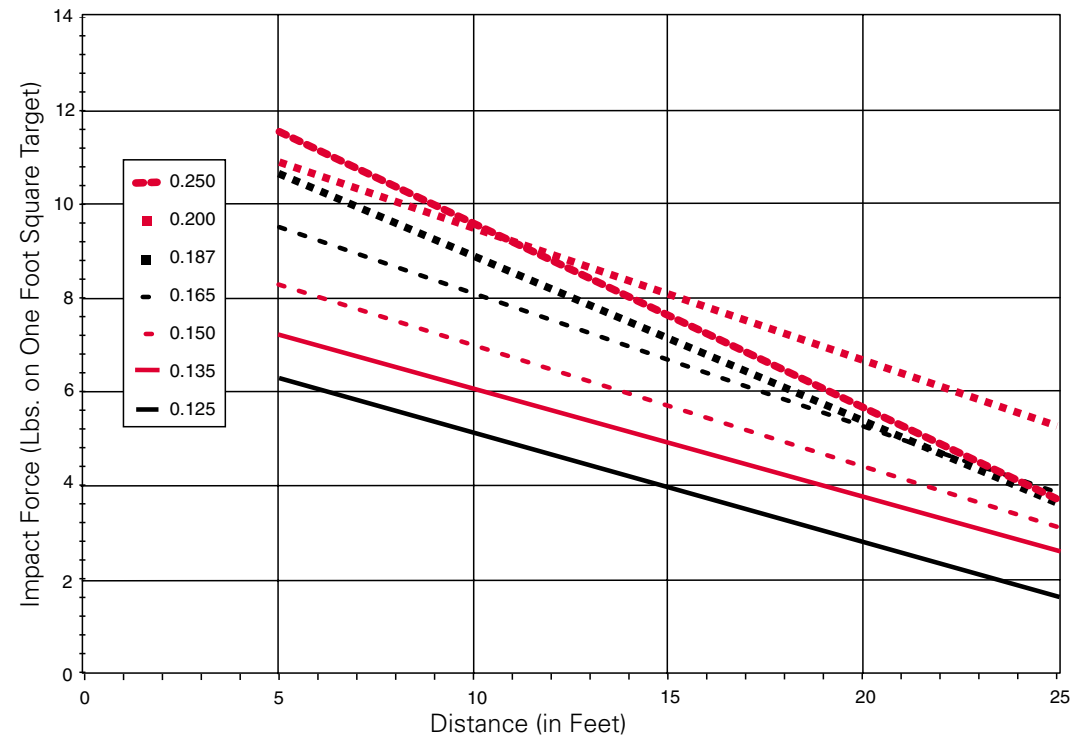

**1-877-426-2538**

**GAMAJET CLEANING SYSTEMS, INC.**

*because your business depends on clean tanks*

# GAMAJET®

Gamajet V  
Product Data  
Performance Characteristics

**CLEANING SYSTEMS, INC.**

## A faster, easier way to clean small tanks.


The unique Gamajet V's compact size readily passes through a 3 inch opening, making it ideal for cleaning smaller tanks, vats and vessels. It uses less flow than any other fluid driven tank cleaner.

Gamajet V offers the cleaning power and flexibility you need. It surpasses spray balls, water blasting, boil-outs, manual hose, and scraping and chipping.

The Gamajet V (patent pending) is a fluid-driven, rotary tank cleaning machine designed to fit through

small passageways and to clean smaller vessels (up to 15' in diameter by 15' high). It revolves 360° in both the horizontal and vertical planes, with synchronized solid jets providing a tight and thorough scouring pattern on the inside tank surfaces in just one complete cycle. Its horizontal and vertical rotation patterns are interlocked and controlled by gears, not by any reaction forces. A choice of nozzle sizes, turbines and gear speeds offers a range of flow rates, pressures and wash cycle times.

**Gamajet V - Flow Rate vs. Typical Full Cycle Time - Standard Gear Ratio**

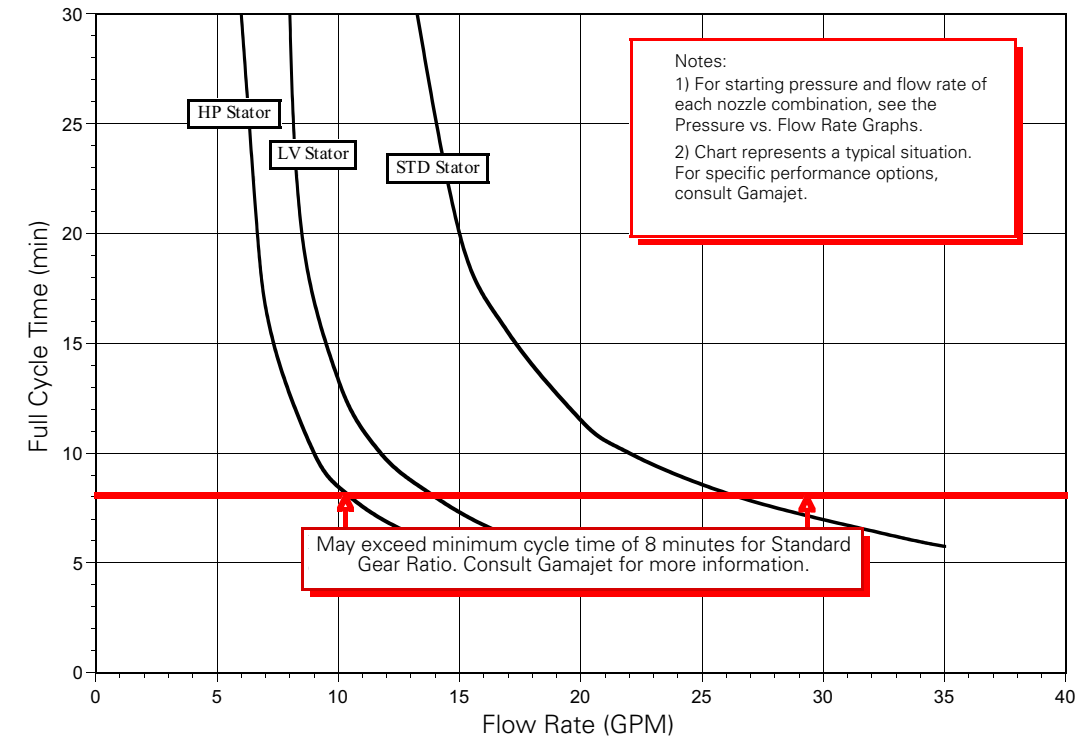

Notes:  
1) For starting pressure and flow rate of each nozzle combination, see the Pressure vs. Flow Rate Graphs.  
2) Chart represents a typical situation. For specific performance options, consult Gamajet.

May exceed minimum cycle time of 8 minutes for Standard Gear Ratio. Consult Gamajet for more information.

**1-877-426-2538**

1-877-GAMAJET


604 Jeffers Circle • Exton PA 19341 • Telephone: (610) 408-9940  
Fax: (610) 408-9945 • e-mail: sales@gamajet.com • Visit our web site at www.gamajet.com

**GAMAJET CLEANING SYSTEMS, INC.**

*because your business depends on clean tanks*


# PRESSURE VERSUS FLOW RATE

**Gamajet V - Pressure vs. Flow Rate - Standard Stator w/ 2 Short Nozzles**

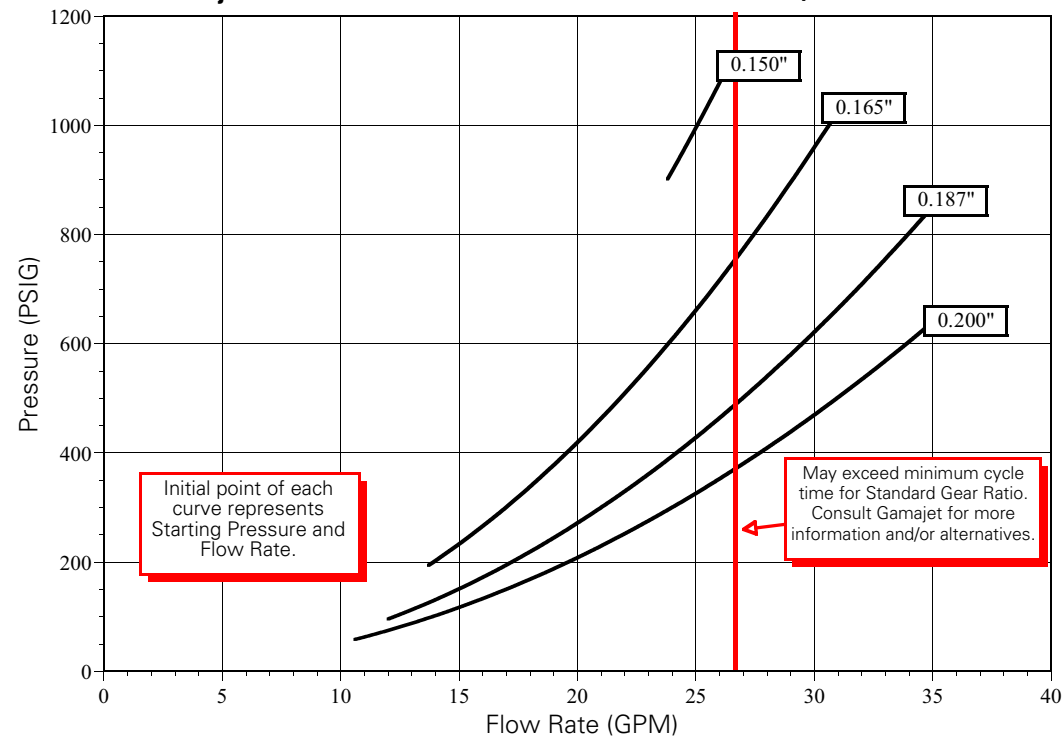


# PRESSURE VERSUS FLOW RATE


**Gamajet V - Pressure vs. Flow Rate - Standard Stator w/ 2 Long Nozzles**

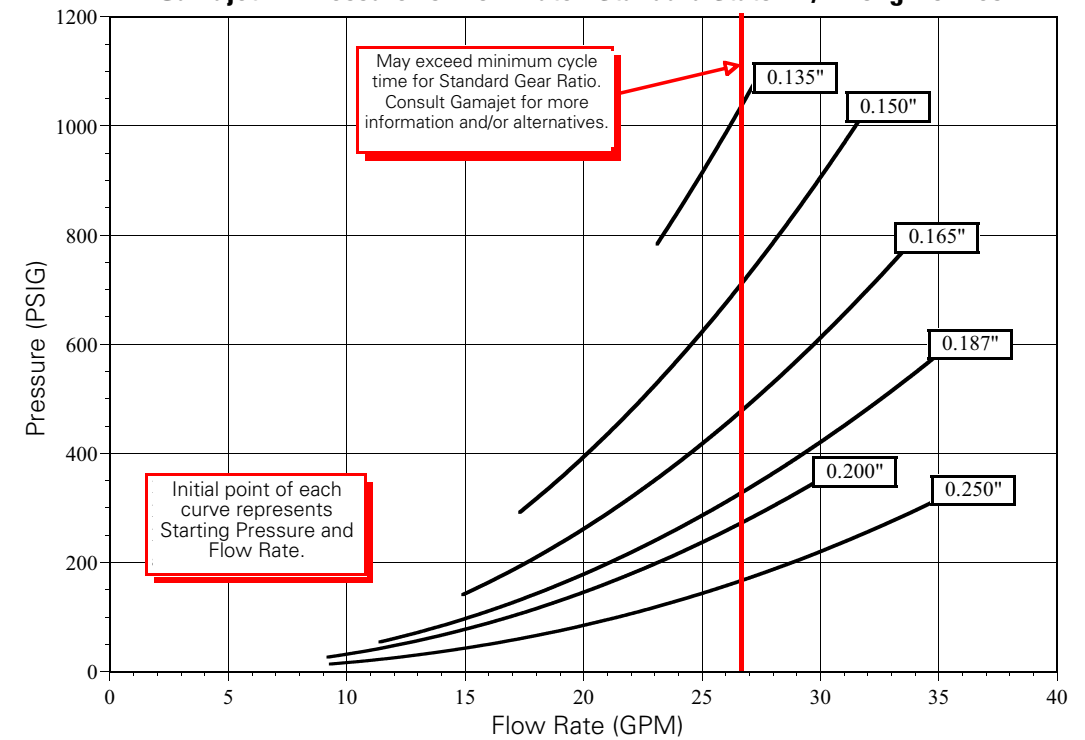

**Gamajet V - Pressure vs. Flow Rate - Standard Stator w/ 3 Short Nozzles**

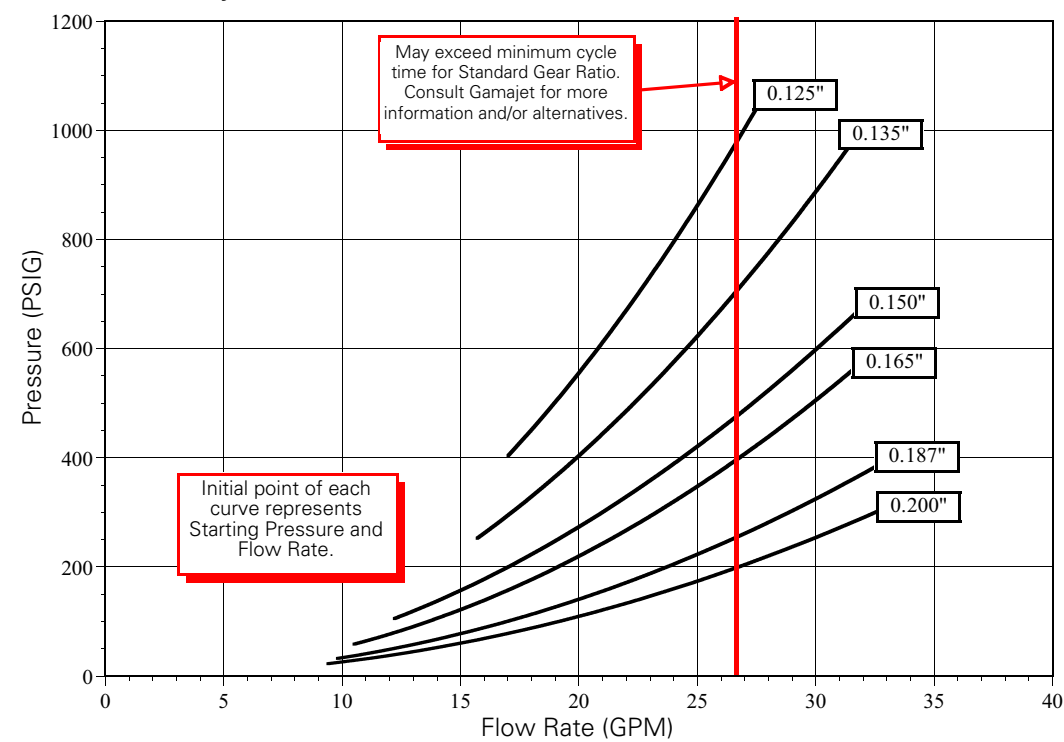

**Gamajet V - Pressure vs. Flow Rate - Standard Stator w/ 2 Long Nozzles**

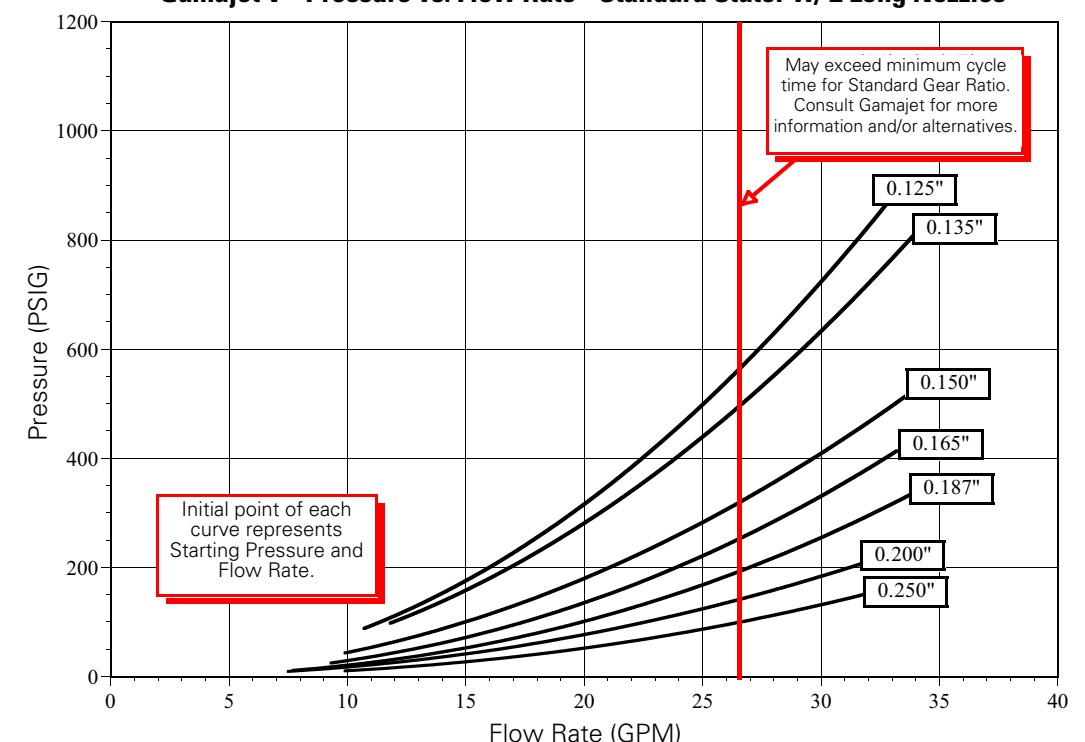

email: [sales@gamajet.com](mailto:sales@gamajet.com)

**GAMAJET CLEANING SYSTEMS, INC.**

because your business depends on clean tanks

[www.gamajet.com](http://www.gamajet.com)

**GAMAJET CLEANING SYSTEMS, INC.**

because your business depends on clean tanks